FILL-SAFE 3 MAINS MULTILEVEL ALARM INSTRUCTIONS

CTS

- This unit was designed and manufactured so it can be installed in exposed locations. However care must be taken when removing or fitting the front panel not to damage the integral seal allowing water ingress.
- To remove the front panel, release the four plastic screws located in the front panel recesses.
- 3. Remove the four knockout sections on the rear half of the enclosure and use the four holes created as a template to mark the mounting surface that should be flat in order that distortion of the enclosure resulting in water ingress does not occur.
- Mount the rear half of the enclosure with the cable entry grommet at the bottom.
- 5. Having mounted the sensor probes in the storage tank to be monitored, pass the sensor cables through the cable entry gland and attach to the terminal block (polarity is not important).(see reverse)
- 6. Connect power to terminals marked L N E 240v. (see reverse)
- The front panel may now be refitted securely ensuring that no damage occurs to the integral seal.
- 8. To test alarm press test and reset buttons simultaneously for 2 seconds, when released unit will enter test sequence, it will test (in order) sounder/LED, Low high level LED's. When test is completed unit will return to stand-by, awaiting an alarm.
- Sounder is activated on High and Low levels, reset will mute the sounder and clear the large LED.

NB: CONNECTIONS (See reverse)

High Level = Blue & Black(Common)

75% Level = Green & Black(Common)

50% Level = Orange/Yellow & Black(Common)

25% Level = Red & Black(Common)

Low Level = Brown & Black(Common)

Centre Tank Services Ltd.

Unit 41

Minworth Industrial Park

Forge Lane Minworth

Sutton Coldfield. B76 1AH

Tel: 0121 351 4445

Fax: 0121 351 4442